

Printer Software for SP6000

Installation Manual

Contents

- 1. Introduction..... 1
 - 1.1. Operating Environment1
- 2. Installation 2
- 3. Uninstallation 7
- 4. Printer Utility 9
 - 4.1 Starting the Printer Utility9
- 5. Revision History 11

1. Introduction

Printer Software for SP6000 provides printer driver and printer utility functions for Star SP6000.

Important: Administrator privilege is required to run the installation.

1.1. Operating Environment

■ Operating System

This software supports the following operating systems.

- ◆ Microsoft Windows 8.1* 32bit/64bit (except Windows RT)
- ◆ Microsoft Windows 8* 32bit/64bit (except Windows RT)
- ◆ Microsoft Windows 7 32bit/64bit
- ◆ Microsoft Windows XP (SP3 or later)

*Limitation for Windows 8 / 8.1


- Star original Printer Driver Function can not be changed from "Modern UI". However, once the setting of its function is changed from "Desktop UI", these function can be used on "Modern UI" as well.
- USB Printer will not be appeared in [Device and Printer] if its power is off.
- Error status (e.g. Paper empty during printing) will not be shown in "Modern UI".

2. Installation

Follow the instructions below to install the software.


Note: Carry out the instructions in chapter 2 "Installation," and then turn the printer's power on.

- ① Insert the CD-ROM that came with the printer into the CD-ROM drive.
If the following window appears, click 'Run Autorun.exe'.

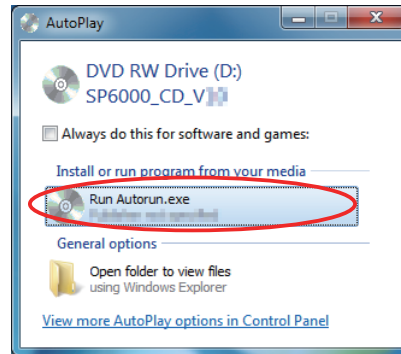

❖ In Windows 8 / 8.1


Toast pop up will be appeared after CD-ROM is set. After that, click 'Run Autorun.exe'.

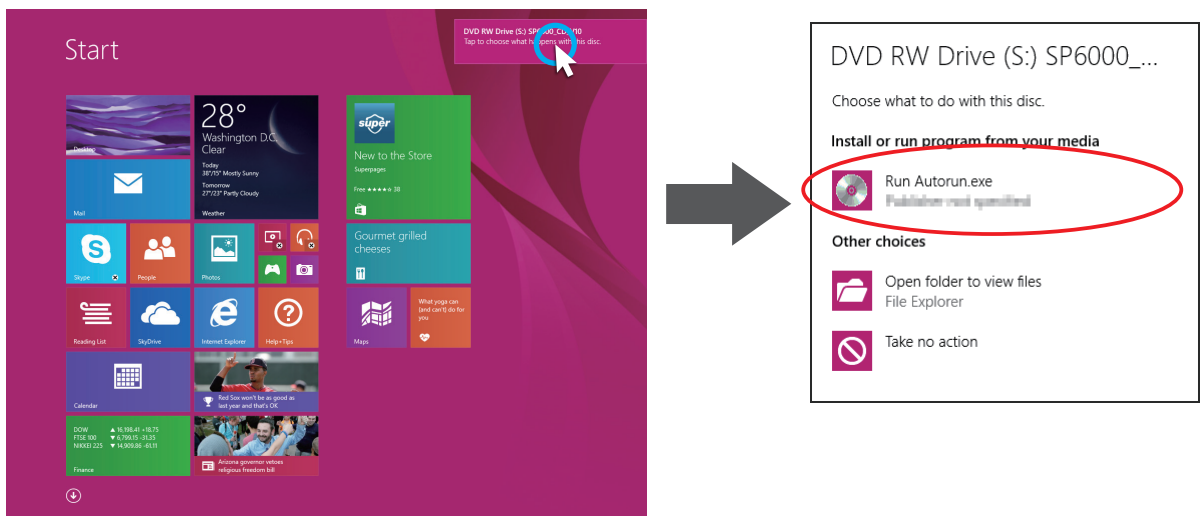

- ② The software installation CD window opens. Click 'Install'.




- ③ The software license agreement for using the contents of the CD appears. Read the agreement. If you agree with the terms, select 'I AGREE', and then click 'NEXT'.

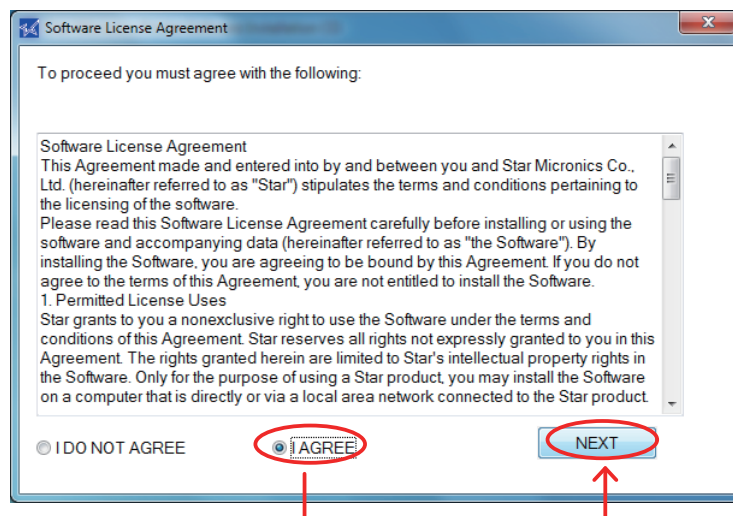


Point! If you click on any of the items on the software installation CD window, the software license agreement for using the contents of the CD will appear and will remain until you agree with its terms.

- ④ If you are using Windows 7, Windows 8 or Windows 8.1, the 'User Account Control' dialog appears. Click 'Continue' or 'Yes'.

- ⑤ Click 'Next'.

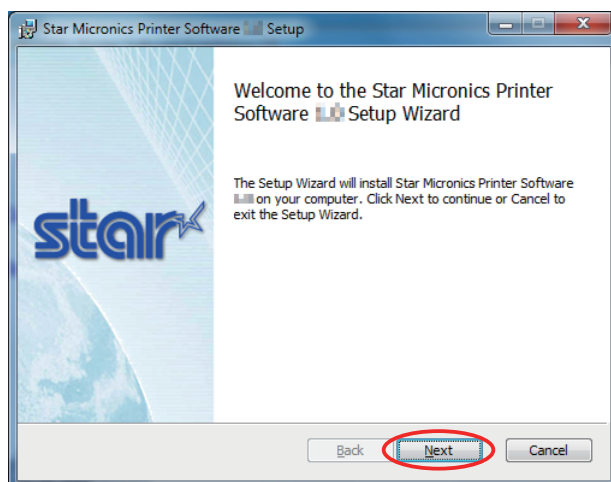


- ⑥ The End-User License Agreement, an agreement for installing the software, appears. Read the agreement. If you agree with the terms, select 'I accept the terms in the License Agreement' check box, and then click 'Next'.

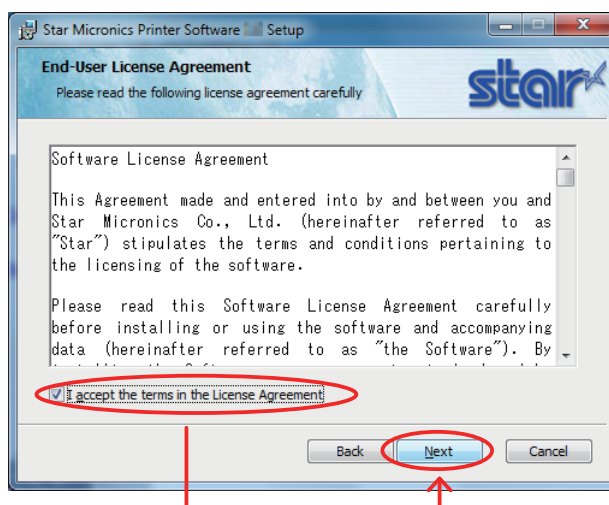



⑦ Choose the setup type.

Click 'Typical' to install all program features and printer drivers. Recommended for most users.


Click 'Custom' to install only the program features that you will need.

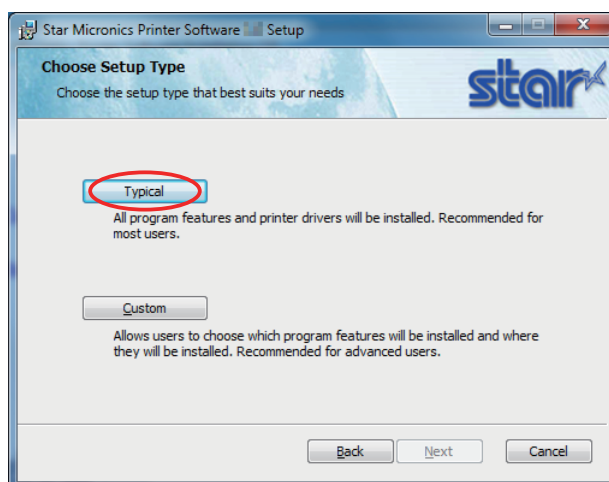

⑧ Click 'Install' to start the installation.

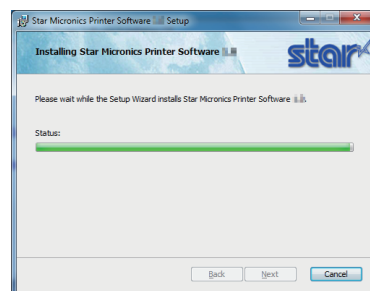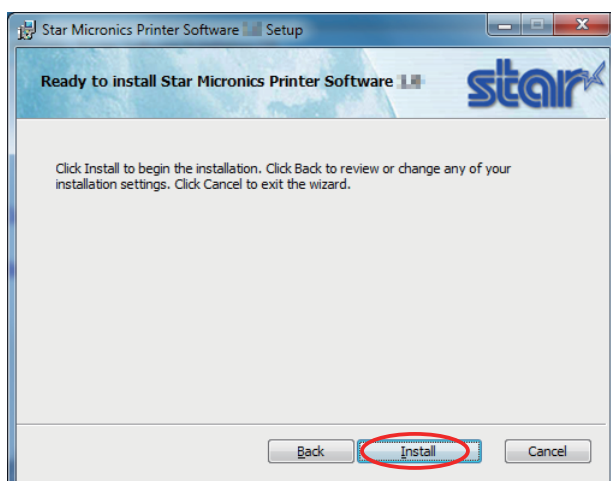

- ⑨ When the software installation completes, the following window appears.
Click 'Finish' to close the wizard.

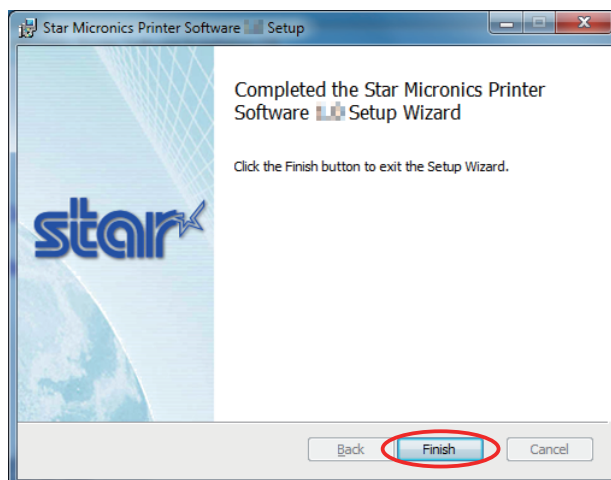


- ⑩ Click 'Exit' to close the software installation CD window.



3. Uninstallation


Follow the procedure below to uninstall the software.

- ① Turn the printer power switch off.
- ② On the Windows taskbar, click 'Start', and then click 'All Programs' > 'Star Micronics' > 'Printer Software for SP6000' > 'Uninstall Printer Software SP6000'.

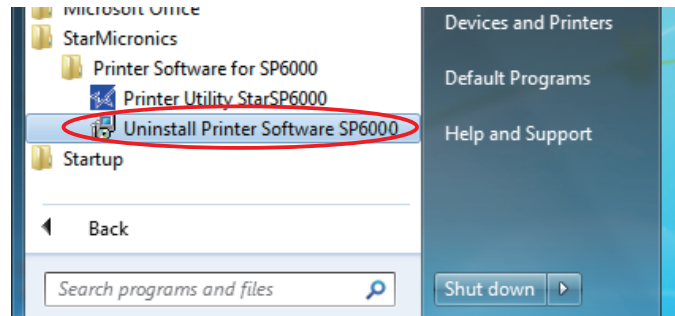


❖ In Windows 8 / 8.1


On the [Apps] view, select 'Star Micronics' > 'Uninstall Printer Software SP6000'.

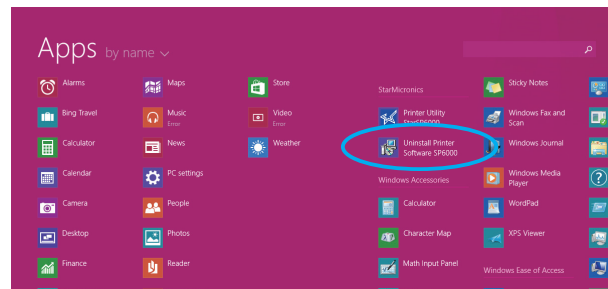


- ③ If you are using Windows 7, Windows 8 or Windows 8.1, 'User Account Control' dialog appears. Click 'Continue' or 'Yes'.
- ④ The following window appears. To continue, click 'Yes'.

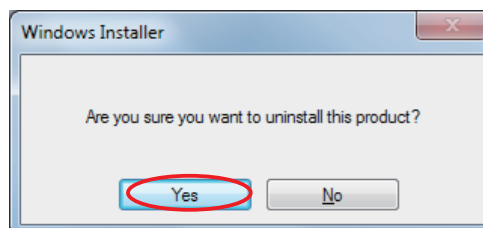


- ⑤ If the following confirmation dialog box appears, select 'Do not close applications' option, and then click 'OK'.

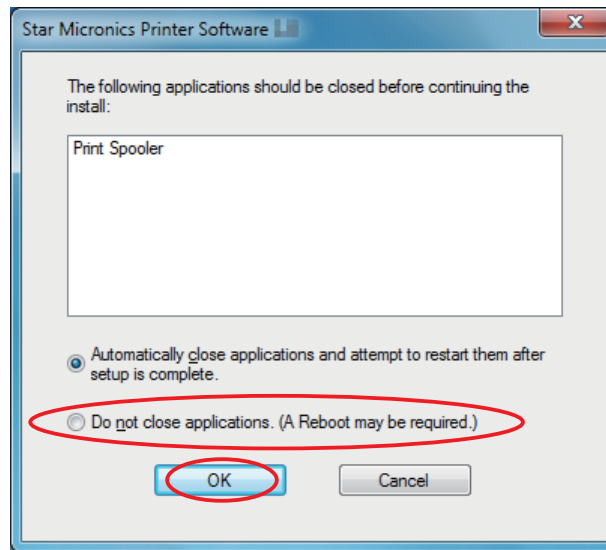

- ⑥ If the following confirmation window appears, click 'OK'.

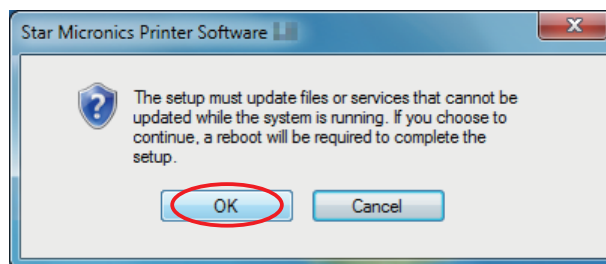

- ⑦ The uninstallation program starts and removes all the relevant software components.

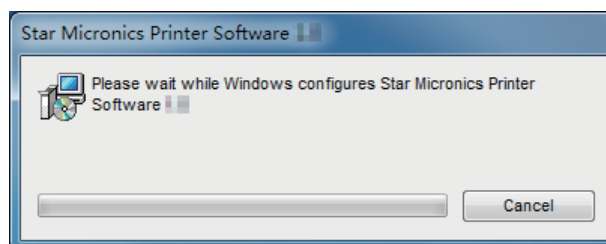

❖ **Note**

After uninstalling the printer utility, the printer queue icon may remain in "Control Panel"- "Devices and Printers".

To delete it, right-click the printer queue icon and choose "Remove device" from the pull-down menu to delete it.

4. Printer Utility


The printer utility connects to the printer and provides various functions. The printer utility connects to the printer according to the settings specified under 'Connection'. The utility functions that you can use vary depending on the connection settings.

For details on how to configure the connection and the utility functions that you can use, see the 'Printer Utility Help'.


4.1 Starting the Printer Utility

Follow the procedure below to start the Printer Utility.

- ① On the Windows taskbar, click 'Start', and then click 'All Programs' > 'StarMicronics' > 'Printer Software for SP6000' > 'Printer Utility StarSP6000'.

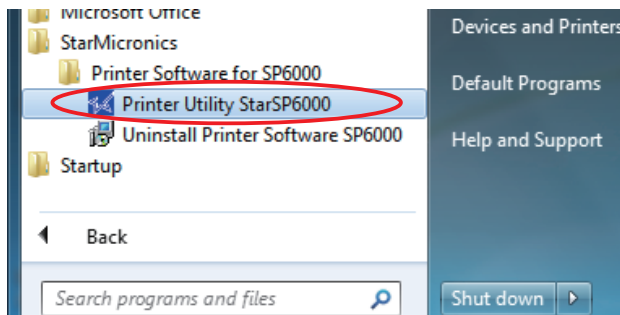


❖ Windows 8 / 8.1

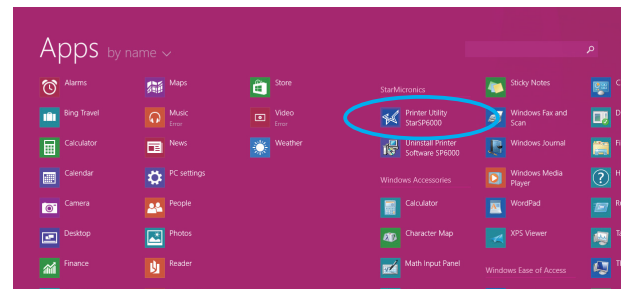

- ② If you are using Windows 7, Windows 8 or Windows 8.1, 'User Account Control' dialog appears. Click 'Continue' or 'Yes'.

③ The printer utility window opens.

When you start the printer utility for the first time, the 'Printer Connection Wizard' appears. Specify the interface to create the 'Connection'. You will be able to use the printer utility functions through the connection that you created.

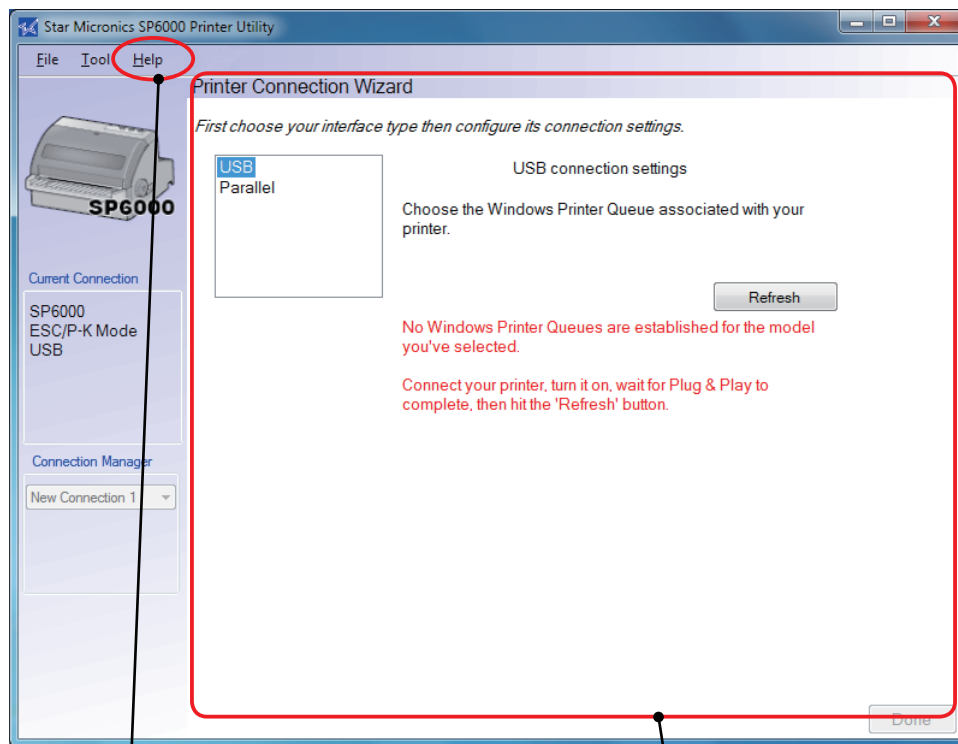

Starting the Printer Utility Help

Printer Connection Wizard

5. Revision History

Rev. No.	Date of Revision	Changes
Rev. 1.0	Mar. 2014	First edition

Notice

- Company and product names are trademarks or registered trademarks of their respective companies.
- Reproduction of any part of this documentation is prohibited.
- The contents of this documentation are subject to change without notice.
- We can assume no responsibility for any results which may come out of the usage instructed in this documentation.



URL: <http://www.starmicronics.com/support/>