

STAR ASIA

HCR12D

USB Wired
Barcode Scanner

www.StarAsia.com
Oct. 2026

Factory Default Setting



Reset Factory Default Configuration

Data Interface



USB-KBW (Default)

CR/LF Setting(USB-KBW)



Only 0A(LF) line feed

Scan Mode

Auto Sense Mode off



Off (Default)

Version No.



Version Number



USB Virtual Com(*driver is needed)



0A(LF) and 0D(CR) both line feed

Auto Sense Mode on



On

LED Indicator Light



On (Default)



Off

Decode Success Sound Setting



Off



On (Default)

Decode Success Tone Setting



Tone 1 (Default)



Tone 2

QR Code URL Link



Disable



Enable(Default)

Full Manual

For more information,
please scan QR code



Buzzer Configuration

Volume Setting



Low



High (Default)

Decode Success Sound Duration Setting



Long(Default)



Short



3



Custom

Start Sound Setting



Off



On (Default)