

mC-Label2 Easy Setup Guide

This document explains the setup procedure for mC-Label2. For further instructions and safety precautions, please refer to the mC-Label2 online manual. Please read the instructions before using the printer.




80879250

Getting Started

Check the Supplied Accessories


If any of the contents are missing or damaged, please contact the dealer that sold you the printer.

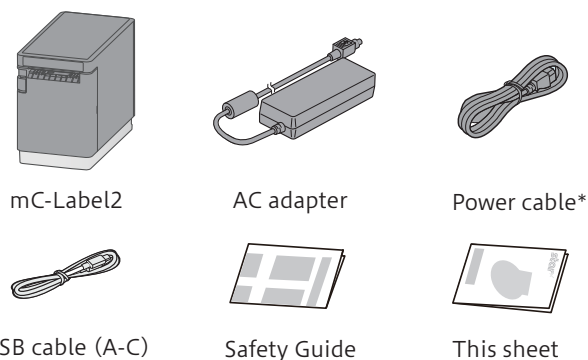

• The rated nameplate label is attached to the bottom of the product.
* Accessories vary depending on the region where the printer was purchased.

How to Refer to FAQ

You can also see FAQ in the mC-Label2 Online Manual from the QR code on the inside of the printer.

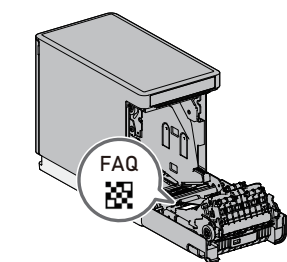


For the owners of other companies' trademarks mentioned in this document, see Trademarks on our website (<https://www.star-m.jp/eng/trademarks.html>).
Copyright 2025 Star Micronics Co., Ltd.

Setup

Before Use

Please remove the protection parts inside the printer and the silica gel inside the rear cover on the back of the printer. (Model name: MCL21CI)


Insert your fingernails into the clearances on the left and right sides of the rear cover, and pull out both sides one by one. Be sure to mount the rear cover before using the printer.

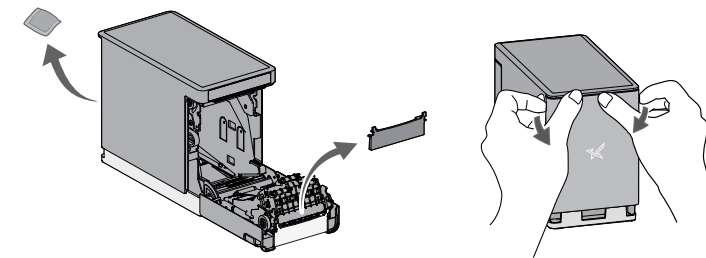

1 Installation

- 1 Connect the tablet or PC to communicate with the printer according to your environment.

Back of the printer

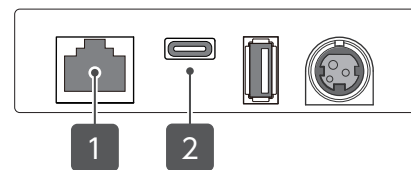


	Communication /Charging	Supported OS	You will need:
1 Wired LAN	Communication	No restrictions	LAN cable
2 USB-C*	Communication /Charging	iOS/Android	USB cable provided with the tablet
	Communication	PC	USB cable (A-C) included with the printer

- ! When using a USB cable that is available commercially or that comes with a smartphone or tablet, perform thorough operation verification.

When configuring the network settings

Once a static IP address is assigned, the IP address will not be changed due to the DHCP server, so the specified connection destination device can be used continuously once set.

- 2 Securely plug the provided power cable into the AC adapter ①.
Plug the AC adapter in the correct vertical orientation into the power connector (24 VDC) of the printer ②.
Insert the power cable plug into the electrical outlet ③.

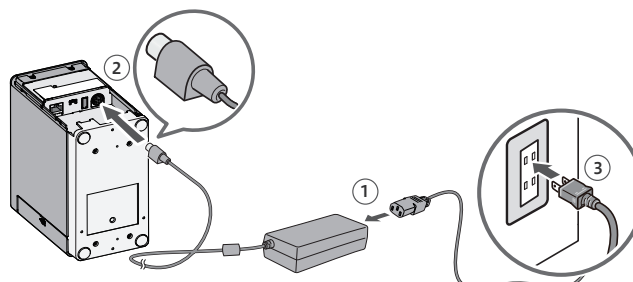


2 Installing a Paper Roll

Types of paper roll that can be used and default settings

	Linerless label	Die cut label	Continuous label	Receipt paper
MCL21CI	✓ Default Setting	✓	✓	✓
MCL21CI LBL	×	✓ Default Setting	×	✓


If paper other than the default is used, configure the media (paper type) setting. The media setting can be changed using the configuration app mentioned in Step 4 after connecting the printer.

- 1 Pull the cover opening lever forward to open the printer cover.

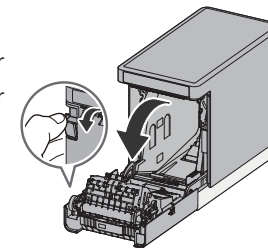


- 2 Adjust the paper guide.

While pulling down the paper guide lever, slide the guide to the left and right to adjust it to the position of the paper width to be used by referring to the scale.

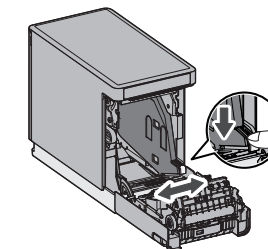


- 3 Insert a paper roll as shown in the illustration.

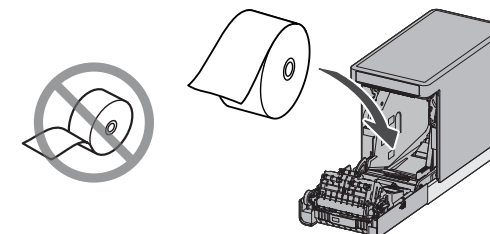

- 4 Pull the end of the paper roll out straight and close the printer cover.


Use the tear bar to cut the paper manually.

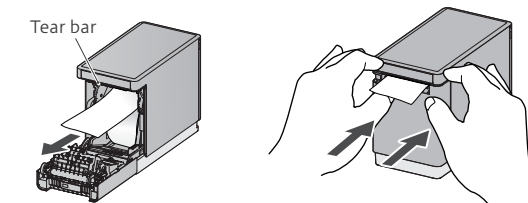

- ! For a linerless label, be careful that the adhesive side does not stick to the printer.

3 Turning On the Power

Turn on the power and confirm that the Power LED (blue) illuminates.

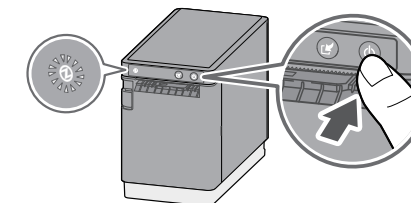

4 Preparing/Setting Up the Configuration App

Use the configuration app to set up the printer from a tablet or PC. Scan the QR code below or search the app to access the download site.

Setting app
Download site



When Using iOS/Android

Star Quick Setup Utility



Star Quick Setup Utility is an app that runs on iOS/Android devices. It offers useful functions for checking printer operations and configuring settings.

Initial settings

The printer settings appropriate for the operation situation are provided, such as the media (paper type) setting.

One Touch Label setting

You can easily print the stored original image on labels by simply pressing the Multi-function button on the printer.

When Using Windows

Star Windows Software



Star Windows Software is software that runs on Windows PCs, allowing users to check printer operations and configure settings. It also contains the Windows printer driver required for printing from Windows applications.

- 1) Download [Star Windows Software].
- 2) Select [Extract All...] to extract the downloaded software and execute "Setup.exe".
- 3) Follow the wizard instructions and complete software installation.



Driver download site for macOS/Linux
<https://www.star-m.jp/supportsite-wsw.html>

Sign Up for Star Micronics Cloud Services

If you connect mC-Label2 to the internet and register it with Star Micronics Cloud Services, helpful cloud services for operating your store are available for free.



Label Builder

It allows anyone to create label data intuitively. The created data can be directly printed or registered to One Touch Label.

Device Monitor

You can check the status of the printer and set email notifications for parts cleaning and replacement.

Scan to
Learn More




Service site

Scan to
Register



Registration site

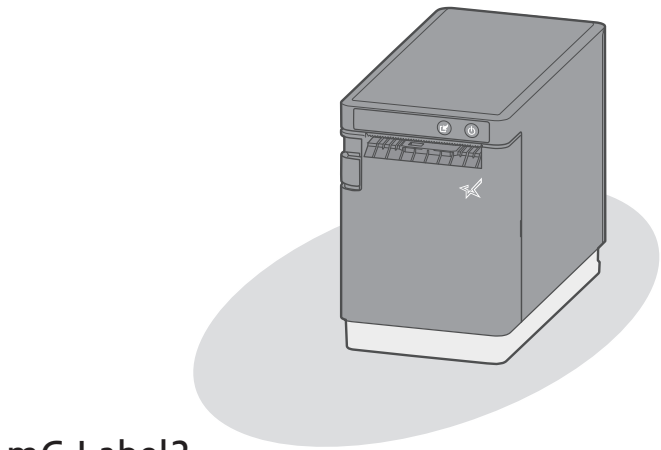

mC-Label2

かんたんセットアップガイド

本書は mC-Label2 を利用するまでの手順を記載しています。

さらに詳しい使用説明、安全のご注意については mC-Label2 オンラインマニュアルに記載されています。ご使用前に必ずお読みください。

オンライン
マニュアル




動画で分かる
かんたん
セットアップ




はじめに

同梱品を確認する

同梱品が不足しているまたは破損している場合は、ご購入先へご連絡ください。

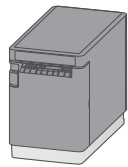


mC-Label2



AC アダプター



電源ケーブル



USB ケーブル (A-C)



安全のしおり




本書

・定格銘版ラベルは製品の底面に貼付されています。

よくあるご質問を参照するときは

本体内側に付いている QR コードから mC-Label2 オンラインマニュアルの FAQ をご覧になれます。

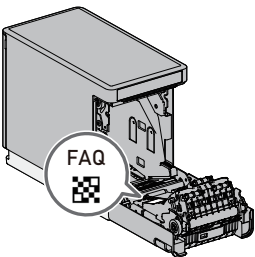


本媒体上の他者商標の帰属先は、弊社ホームページの商標について (<https://www.star-m.jp/trademarks.html>) をご確認ください。

Copyright 2025 Star Micronics Co., Ltd.

セットアップする

ご使用前に


プリンター内の保護部品とプリンター背面リヤカバー内のシリカゲルを取り除いてください。(対象モデル:MCL21CI)
リヤカバーは、左右にある隙間に爪をかけ、片側ずつ取り外します。プリンターをご使用になるときは、必ずリヤカバーを取り付けてください。

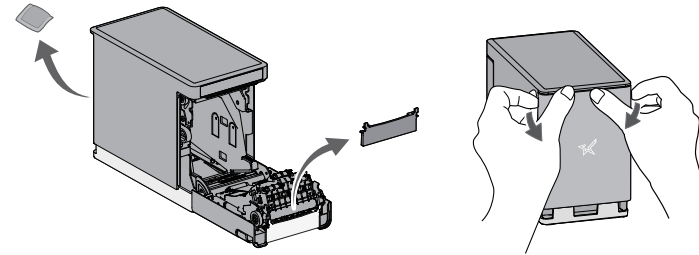

1 設置する

- プリンターと通信するタブレット／PC をご使用の環境に合わせて接続します。

プリンター背面

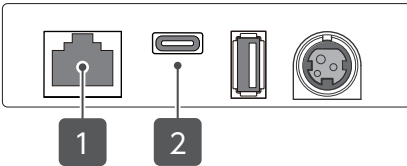

	通信／充電	対応 OS	準備するもの
1 有線 LAN	通信	制限なし	LAN ケーブル
2 USB-C®	通信・充電	iOS/Android	タブレットに付属の USB ケーブル
	通信	PC	製品に付属の USB ケーブル (A-C)

- 市販またはスマートフォン／タブレットに付属の USB ケーブルを利用する場合は、十分に動作の検証を行ってください。


ネットワーク設定を行う場合

固定 IP アドレスを設定すると、DHCP サーバーによる IP アドレスの変更が起こらないため、一度指定した接続先デバイスを継続して使うことができます。

- 付属の電源ケーブルを AC アダプターにしっかりと差し込みます ①。

AC アダプターのプラグを上下の向きに注意してプリンターの電源コネクタ (DC24V) に接続します ②。

電源ケーブルのプラグをコンセントに差します ③。

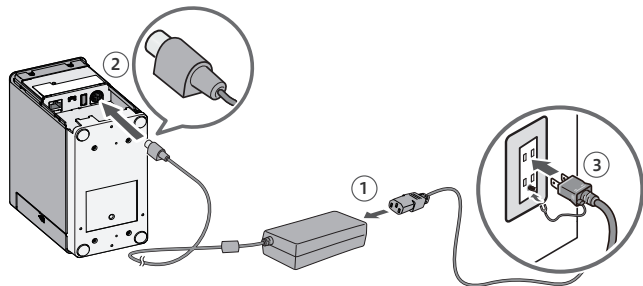


2 ロール紙をセットする

使用可能なロール紙の種類と初期設定

	ライナーレスラベル	ダイカットラベル	全面ラベル	レシート紙
MCL21CI	○ 初期設定	○	○	○
MCL21CI LBL	×	○ 初期設定	×	○


初期設定と異なる用紙を使用するときはメディア (用紙タイプ) 設定を行います。メディア設定は接続後に手順 4 の設定用アプリで変更できます。

- カバーオープンレバーを手前に引いて、プリンターカバーを開けます。

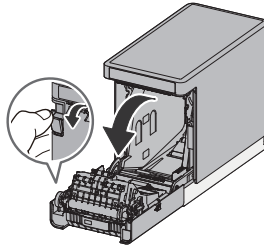


- 用紙ガイドを調整します。


用紙ガイドのレバーを下に押しながら、左右にスライドさせ、目盛りを参考にしながら、使用する用紙幅の位置に合わせます。

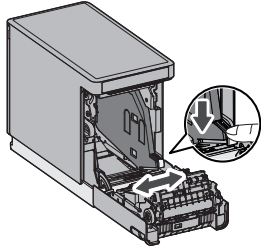

- ロール紙をイラストの向きでセットします。

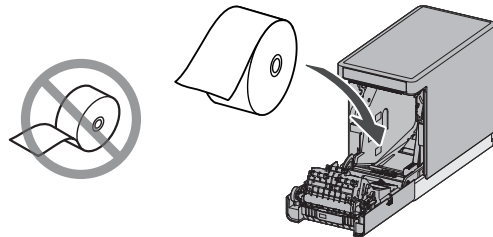


- 用紙の端をまっすぐ引き出し、プリンターカバーを閉めます。ティアバーを使用して用紙を手切りできます。

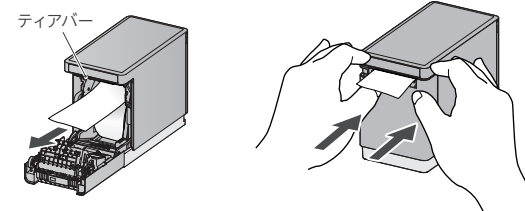

- ライナーレスラベルの場合は、粘着面がプリンターに張り付かないよう注意してください。

3 本体の電源を入れる

電源を入れ、Power LED (青) が点灯したことを確認します。

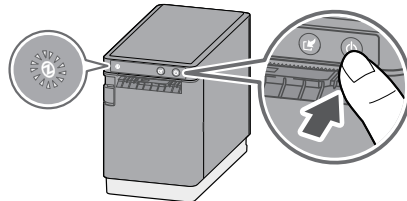

4 設定用アプリを準備・設定する

設定用アプリを利用して、タブレット／PC からプリンターの設定を行います。以下の QR コードを読み込むか、アプリを検索してダウンロードサイトにアクセスしてください。

設定用アプリ
ダウンロードサイト



iOS/Android をご利用の場合

Star Quick Setup Utility



Star Quick Setup Utility は、iOS/Android デバイスでご利用いただけるアプリです。プリンターの動作確認や各種設定にご利用いただける便利な機能をご提供しています。

初期設定

メディア (用紙タイプ) 設定など使用状況に適したプリンター設定をご案内します。

One Touch Label の設定

プリンターの多機能ボタンを押すだけで、プリンターに登録したオリジナル画像がいつでも気軽にラベル印刷できます。

Windows をご利用の場合

Star Windows Software



Star Windows Software は、Windows PC でご利用いただけるソフトウェアで、プリンターの動作確認や各種設定を行います。また、Windows アプリケーションからの印刷に必要な Windows プリンタードライバーを含みます。


- [Star Windows Software] をダウンロードします。
- ソフトウェアを "すべて展開" して「Setup.exe」を実行します。
- ウィザードに沿ってインストールを完了してください。



macOS/Linux 用のドライバーダウンロードはこちら
<https://www.star-m.jp/supportsite-wsw.html>

スター精密クラウドに登録する

mC-Label2 をインターネットに接続し、スター精密クラウドに登録すると、お店の運用に役立つクラウドサービスを無料でご利用いただけます。



Label Builder

どなたでも直感的にラベルデータを作成することができます。作成したデータの直接印刷や One Touch Label への登録もできます。

Device Monitor

プリンターの状態を確認でき、部品の清掃や交換時期のメール通知などを設定することができます。

もっと詳しく
知りたい



サービスサイト

登録は
こちらから



登録サイト